

# GLASSI

## MACHINE GLASSWASH DETERGENT

- Non-tainting, non-foaming formula
- Economical in use
- Anti-corrosive - protects your machine

### USES

A machine glasswash detergent that removes stains and soiling, leaving glassware sparkling.

GLASSI is pre-softened for effectiveness in both hard and soft water.

 
Use to clean glassware, glasses and tumblers in all automatic glass washing machines. Suitable for use in pubs, clubs, nightclubs, restaurants and bars.

### DIRECTIONS

Put dosing tube into the container of GLASSI, so that it reaches the bottom. The dosing unit, which has been pre-set to a specific concentration, will automatically dispense GLASSI into the machine.

For best results, use in conjunction with Christeyns' RINSI. Ensure that the thermostat on the machine is set correctly.


GLASSI can be added manually for each cycle if required. Typically 42ml (1.5 fluid ounces) should be added to the machine for each wash cycle.

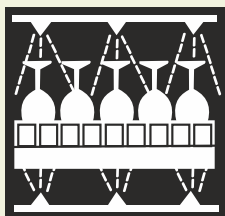


**CHRISTEYNS**

PROFESSIONAL HYGIENE

 **Code: 328**

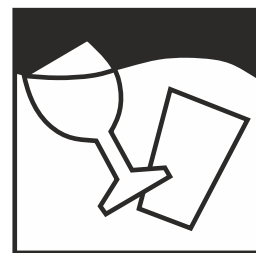

pH in use

 

### PACK SIZES



5L