# **RELAVIT**

# **GLASSWASH**

# Auto glasswash detergent

A machine glasswash detergent that removes stains and soiling, leaving glassware sparkling. RELAVIT GLASSWASH is presoftened for effectiveness in both hard and soft water.

Use to clean glassware, glasses and tumblers in all automatic glass washing machines. Suitable for use in pubs, clubs, nightclubs, restaurants and bars.


### **METHOD OF USE**




Wear correct PPE when changing dishwashing tubes.



Place the tube into the new container of RELAVIT Glasswash.

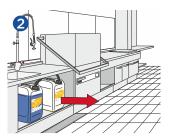

Turn off the dishwasher and remove the existing detergent.

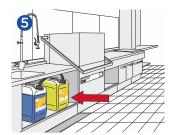

Put the RELAVIT Glasswash back by the dishwashing machine.



Carefully remove the dishwashing tube out of the RELAVIT Glasswash container.



Run the dishwasher cycle to ensure the product is pulling through.

### DOSAGE

### **GLASSWASH MACHINE**

42ml per wash cycle

### **PRODUCT INFO**



Pack Size: Product Code: Odour: Colour: pH (undiluted): Shelf life: 5L 328 Characteristic Yellow 13.5 2 years



For Health & Safety information, please scan the QR code provided.







### RELAVIT

# GLASSWASH

### **AUTO GLASSWASH DETERGENT**



- TAINT-FREE AND NON-FOAMING FORMULA
- ECONOMICAL IN USE
- ANTI-CORROSIVE PROTECTS YOUR MACHINE

### **PRODUCT DESCRIPTION**

A machine glasswash detergent that removes stains and soiling, leaving glassware sparkling. RELAVIT Glasswash is pre-softened for effectiveness in both hard and soft water.

Use to clean glassware, glasses and tumblers in all automatic glass washing machines. Suitable for use in pubs, clubs, nightclubs, restaurants and bars.

### **INSTRUCTIONS FOR USE**

Put dosing tube into the container of RELAVIT Glasswash, so that it reaches the bottom. The dosing unit, which has been pre-set to a specific concentration, will automatically dispense RELAVIT Glasswash into the machine.

For best results, use in conjunction with Christeyns' RELAVIT Rinse T. Ensure that the thermostat on the machine is set correctly.

RELAVIT Glasswash can be added manually for each cycle if required. Typically 42ml (1 fluid ounce) should be added to the machine for each wash cycle.

#### **ADDITIONAL INFORMATION**

Product code: 328 pH Level: 13.5

### **STORAGE**

Store between 5 and 40°C

### **PACKAGING**

2 x 5 Litre

### **NON WARRANTY**

This information is based on our current knowledge and is intended to describe the product for the purposes of health, safety and environmental requirements only. It should not therefore be construed as guaranteeing any specific property of the product.

